


ACCESS PANEL - NON-RATED | SURFACE-MOUNT INSTALLATION & MAINTENANCE GUIDE | 14I-208

GENERAL:

The following installation & maintenance guide applies to the Maxam® non-rated access panels. Series: NFM


Local codes and/or Authority having jurisdiction should be followed.

Note: Wall or ceiling is framed into the size of the door being ordered. We undersize our doors by 1/4" (6mm). **DO NOT UNDERSIZE YOUR FRAMING**

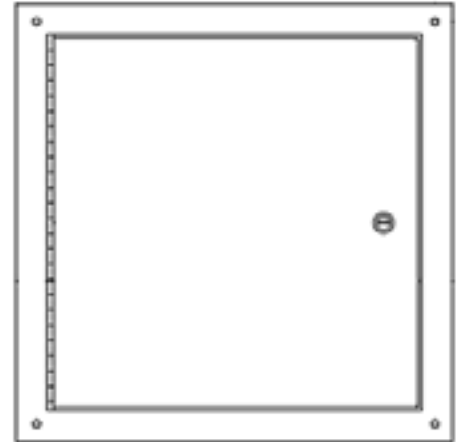

INSTALLATION:

1. Lay door on top of framed opening
2. Fasten through holes in the outer frame/ flange.
Note: Do not cover over torque fasteners to avoid twisting/distorting the frame
3. Operate door a few times to check that no fasteners or other items interfere with it's function.

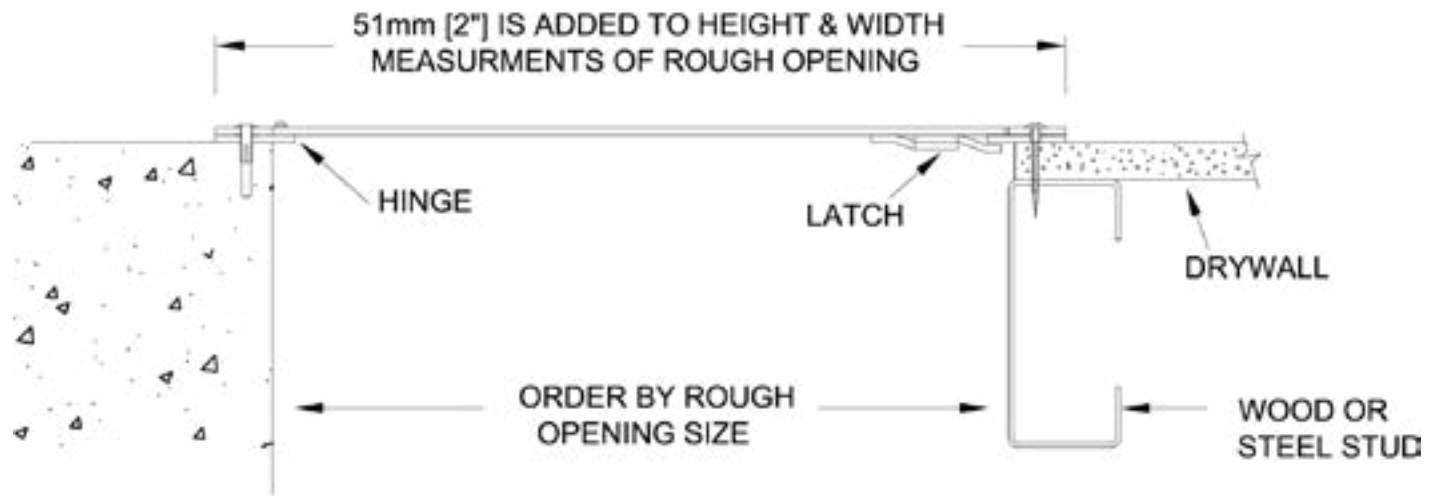

OPERATION:

When models are correctly installed, the door will open to 90°.

MAINTENANCE:

Our access panels are designed to be maintenance free. However, it is recommended that the outer surface of the panel, and the hinge area, be kept clear from debris and dirt, to ensure correct operation of the hinged door. If latches, locks or hinges need to be lubricated, use a "3 in 1" type light oil, removing excess with a cloth. To clean painted surfaces, use a soft cloth and mild soap and water.



**MAXAM
METAL PRODUCTS**

Unit #5 7978 North Fraser Way, Burnaby, BC V5J 0C7

604-433-4243

info@maxammetal.com

www.maxammetal.com

Installation & Maintenance Guide | 14I-208