

# ACCESS PANEL - NON-RATED | SECURITY INSTALLATION & MAINTENANCE GUIDE | 14I-212


## GENERAL:

The following installation & maintenance guide applies to the Maxam® non-rated access panels. Series: NSH, NSD

Local codes and/or Authority having jurisdiction should be followed.


**Note:** Wall or ceiling is framed into the size of the door being ordered. We undersize our doors by 1/4" (6mm)

**\*DO NOT UNDERSIZE YOUR FRAMING**

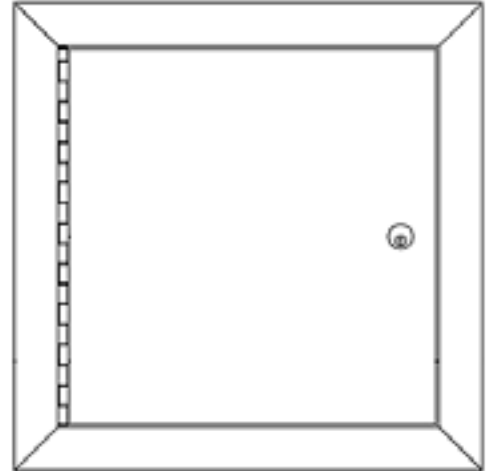

## INSTALLATION FOR EXPOSED FLANGE:

1. Insert the door frame into the opening to check fit. Flanges should seat firmly against the surface.
2. Secure along the hinge side first taking care to square the door panel up. See page 2 Fig A for details.
3. Once squared up fasten through holes provided in frame. Note: Do not over torque fasteners to avoid twisting or distorting the frame.
4. Operate door a few times to check that no fasteners or other items interfere with it's function.
5. If casting in place make sure to brace inside of doors so frame is not bowed inwards during pour.

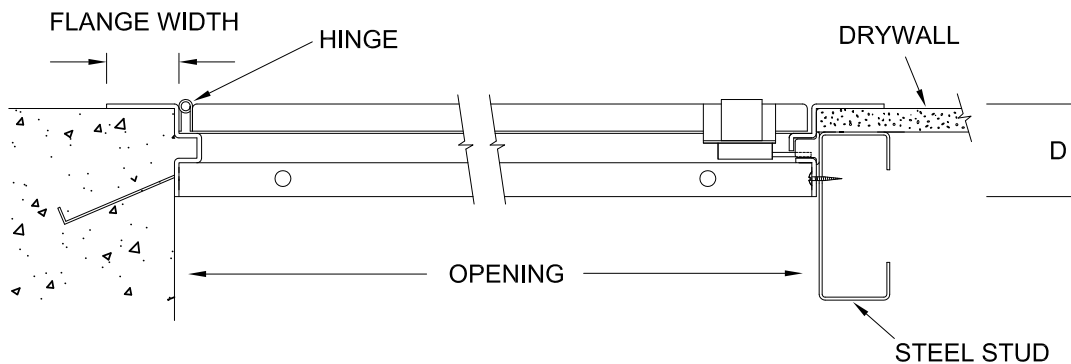

**NHS Installation**

## OPERATION:

When models are correctly installed, the door will open to 90°.

## MAINTENANCE:

Our access panels are designed to be maintenance free. However, it is recommended that the outer surface of the panel, and the hinge area, be kept clear from debris and dirt, to ensure correct operation of the hinged door. If latches, locks or hinges need to be lubricated, use a "3 in 1" type light oil, removing excess with a cloth. To clean painted surfaces, use a soft cloth and mild soap and water.



Unit #5 7978 North Fraser Way, Burnaby, BC V5J 0C7

604-433-4243  
info@maxammetal.com  
www.maxammetal.com

Installation & Maintenance Guide | 14I-212

REV A | FEB 2024